


WILDEY REGULATOR ADJUSTMENT

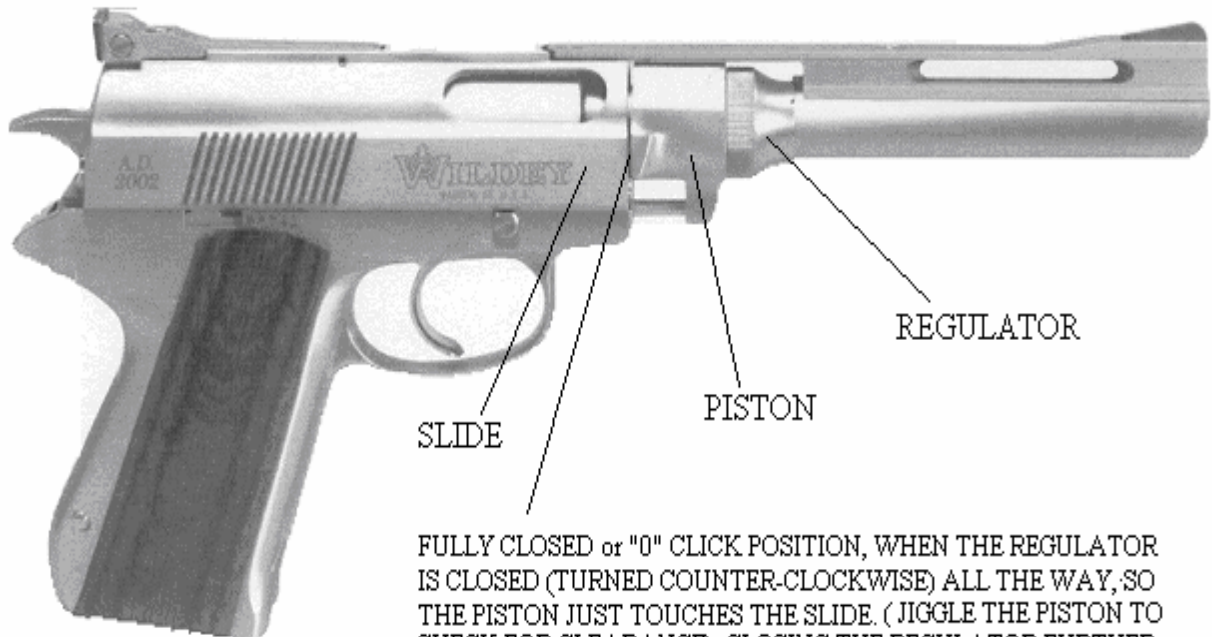

FULLY CLOSED or "0" CLICK POSITION, WHEN THE REGULATOR IS CLOSED (TURNED COUNTER-CLOCKWISE) ALL THE WAY, SO THE PISTON JUST TOUCHES THE SLIDE. (JIGGLE THE PISTON TO CHECK FOR CLEARANCE). CLOSING THE REGULATOR FURTHER WILL PUSH THE SLIDE BACK AND THROW OFF THE REGULATOR STARTING CLICK COUNT FOR PROPER ADJUSTMENT.

The average WILDEY pistol with a barrel from 8" to 12" will work properly as far as feeding, cycling and ejecting with the regulator open from 12 to 14 clicks. Shorter barrels generally need one or two more clicks open (clock-wise) and longer barrels generally work well with one or two clicks less open (counter clock-wise).

Keep in mind that each gun is different as you work out the best setting for your gun.

When you have good feeding, cycling and ejection, the angle of ejection can be moved a little by changing the regulator adjustment, less open will move the ejection towards the front and more open will move the ejection towards the rear. The best is for the ejection to go straight out to the side or a little to the rear.

As the gun breaks in the regulator adjustment may change some. Generally you may find one click less will be needed for good operation and feeding.