

OPERATING INSTRUCTIONS

The LG-305 is activated by a strategically located pressure pad. With a normal shooting grip, your middle finger will naturally hit the pressure pad whether shooting right or left-handed.

A master ON/OFF is located at the heel/bottom of the grip on the right panel to turn the laser off. The laser should be left in the ON position under most circumstances. Turning the master switch OFF will NOT increase battery life.

PLEASE READ ENTIRE OWNER'S MANUAL PRIOR TO INSTALLING AND USING YOUR NEW LASERGRIPS.

Crimson Trace

800-442-2406 or 503-783-5333

Fax: 503-783-5334

Customer Service E-Mail: customer@crimsontrace.com

www.crimsontrace.com

L A S E R G R I P S[®]

27-4079 REV 002 12/10

www.crimsontrace.com

9780 SW Freeman Dr.
Wilsonville, OR 97070 USA
Tel: (800) 442-2406
Fax: (503) 783-5334


Crimson  **Trace**





LG-305 for
SMITH & WESSON J-FRAME ROUND BUTT
INSTALLATION HANDBOOK
L A S E R G R I P S[®]

THANK YOU FOR SELECTING THE FINEST LASER SIGHTING SYSTEM: **CRIMSON TRACE LASERGRIPS AND LASERGUARD**. WHEN IT COMES TO SPEED, ACCURACY AND SECURITY, CRIMSON TRACE IS THE TOP CHOICE OF LAW ENFORCEMENT, MILITARIES AND LEGALLY ARMED CITIZENS AROUND THE WORLD.

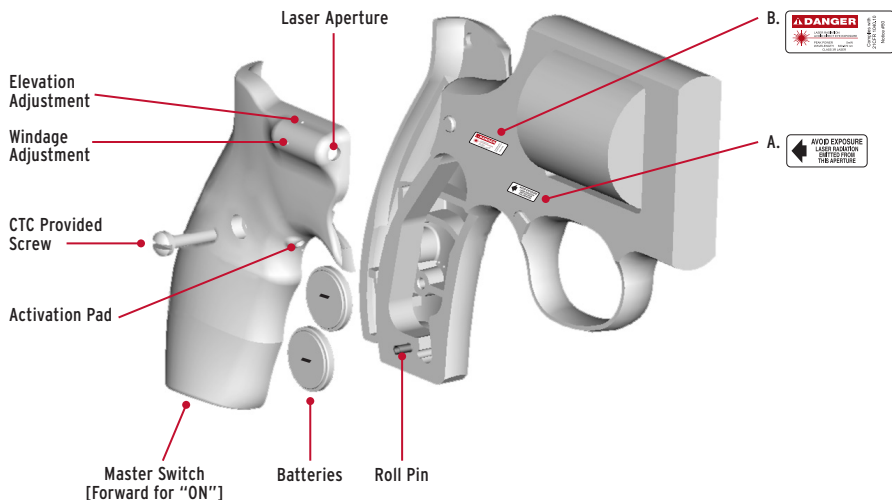

BATTERIES

Two (2) CR2032 or DL2032 Lithium Cells.

PRODUCT SPECIFICATIONS

BEAM INTENSITY: 5mW peak, 633 nm, Class 3R laser
DOT SIZE: Approximately 0.5 inches diameter at 50 feet
BATTERIES: Two #2032 lithium batteries;
 over four hours of illumination

ACTIVATION: Front-located integrated momentary
 pressure pad and master ON/OFF switch

WARRANTY: Three-year full warranty
 This product complies with 21 CFR 1040.10



INSTALLATION INSTRUCTIONS

1. Make sure firearm is unloaded. Open cylinder and double check that cylinder is empty. (See "Four Basic Rules Of Firearm Safety" in Laser Sight Owner's Handbook.)
 2. Remove existing grips.
 3. Place both Batteries into the right side panel positive (+) side up.
 4. Line up right-side of Lasergrips® to the roll pin on the right side of the frame and hold in place. Line up left side of Lasergrips to the roll pin on left side of frame and press both sides of grip together.
 5. Install CTC provided screw from Right to Left and tighten grips to frame.
 6. Attach "Aperture" warning label with the arrow pointing to the laser aperture. Attach laser "Danger" sticker to outside of pistol.
 7. To activate Lasergrips, slide the master ON/OFF switch forward to the ON position. The switch is located on the heel/bottom of the Lasergrips. Press pressure activation switch located in center of rubber front strap directly beneath trigger guard to activate the laser.
 8. Confirm that laser and iron sights are in alignment. Laser dot should rest on top of front site post with correct iron sight picture. Lasergrips are sighted-in at the factory to 50 feet, but can be fine-tuned to any point of impact by adjusting for windage and elevation. (See Laser Sight Owner's Handbook for complete sighting information.)
-

LASER SAFETY LABELING

IMPORTANT: LASER PRODUCTS MUST ONLY BE OPERATED WITH THE SAFETY LABEL APPLIED TO THE FIREARM.

Labels could not be affixed to the product but are supplied and must be installed as indicated below:

- A. Attach the "Aperture" warning label with the arrow pointing to the laser aperture.
- B. Attach the "Danger" warning label to the outside of the firearm.

Use caution when activating the laser to avoid direct eye exposure, which can result in permanent eye damage. Follow all precautions as outlined by the firearms manufacturer. Keep this and all firearm related products locked and secured from children or other unauthorized users.

