

Cuisinart®

INSTRUCTION BOOKLET



Custom Classic™ Toaster Oven Broiler

TOB-40

TABLE OF CONTENTS

Important Safeguards	2
Special Cordset Instructions	3
Features and Benefits	4
Before First Use	5
General Guidelines	5
Operation	5
Toast	5
Bagel	5
Bake	5
Warm	5
Broil	5
Cleaning and Maintenance	6
Oven Rack Position Diagrams	6
Warranty	7

Please read these instructions and keep them handy. They will help you to use your Cuisinart® Custom Classic™ Toaster Oven Broiler to its fullest so that you will achieve consistent, professional results.

IMPORTANT SAFEGUARDS

When using an electrical appliance, basic safety precautions should always be followed, including the following:

1. **Read all instructions.**
2. **UNPLUG FROM OUTLET WHEN NOT IN USE AND BEFORE CLEANING. Allow to cool before cleaning or handling.**
3. Do not touch hot surfaces. Use handles or knobs.
4. To protect against electrical shock, do not place any part of the toaster oven broiler in water or other liquids. See instructions for cleaning on page 6.

5. Close supervision is necessary when any appliance is used by or near children.
6. Do not operate any appliance with a damaged cord or plug or after the appliance has malfunctioned or has been dropped or damaged in any way or is not operating properly. Return the toaster oven broiler to the nearest Cuisinart Repair Center for examination, repair or mechanical or electrical adjustment.
7. The use of accessory attachments not recommended by Cuisinart® may cause injury.
8. Do not use outdoors.
9. Do not let cord hang over the edge of the table or countertop where it could be pulled on inadvertently by children or pets, or touch hot surfaces, which could damage the cord.
10. Do not place toaster oven broiler on or near a hot gas or electric burner or in a heated oven.
11. Do not use this toaster oven broiler for anything other than its intended purpose.
12. Extreme caution should be exercised when using containers constructed of materials other than metal or glass in the toaster oven broiler.
13. To avoid burns, use extreme caution when removing tray or disposing of hot grease.
14. **When not in use, always unplug the unit.** Do not store any materials other than manufacturer's recommended accessories in this oven.
15. Do not place any of the following materials in the oven: paper, cardboard, plastic and similar products.
16. Do not cover crumb tray or any part of the oven with metal foil. This will cause overheating of the oven.
17. Oversize foods, metal foil packages and utensils must not be inserted in the toaster oven broiler, as they may involve a risk of fire or electric shock.

-
18. A fire may occur if the toaster oven broiler is covered or touching flammable materials such as curtains, draperies, and walls, when in operation. Do not store any items on top of the appliance when in operation. Do not operate under wall cabinets.
 19. Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, involving a risk of electric shock.
 20. Do not attempt to dislodge food when the toaster oven broiler is plugged into electrical outlet.
 21. Warning: To avoid possibility of fire, NEVER leave toaster oven broiler unattended during use.
 22. Do not rest cooking utensils or baking dishes on glass door.
 23. Turn the function dial to the OFF position to turn off toaster oven broiler.
 24. Where applicable, always attach plug to appliance and check that the function dial is off before plugging cord into wall outlet. To disconnect, turn the function dial to off, then remove plug from wall outlet.
 25. Do not operate your appliance in an appliance garage or under a wall cabinet. **When storing in an appliance garage always unplug the unit from the electrical outlet.** Not doing so could create a risk of fire, especially if the appliance touches the walls of the garage or the door touches the unit as it closes.

SPECIAL CORDSET INSTRUCTIONS

A short power supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.

Extension cords may be used if care is exercised in their use.

If an extension cord is used, the marked electrical rating of the extension cord must be at least as great as the electrical rating of the appliance, and the longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be tripped over or pulled on by children.

NOTICE

This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

FOR HOUSEHOLD USE ONLY
NOT INTENDED FOR COMMERCIAL
USE
SAVE THESE INSTRUCTIONS

FEATURES AND BENEFITS

1. Function Dial

Select cooking method – TOAST, BAGEL, BAKE, WARM or BROIL.

2. Temperature Dial

Select desired temperature for the Baking, Warm or Broiling functions.

3. Toast Shade Dial

Select the desired toast shade for the Toast and Bagel functions – Light, Medium or Dark.

4. Toasting Start/Stop Button

Push the Start/Stop button to start the Toast or Bagel function.
Push the Start/Stop button to stop toasting in mid cycle and shut off oven.

5. Oven ON Indicator

Indicator light will remain lit when oven is in use.

6. Oven Rack

Oven rack slides out automatically when the door is opened.

7. Slide-out Crumb Tray

The slide-out crumb tray comes already positioned in your oven.
The crumb tray slides out from the bottom front of the toaster oven broiler for easy cleaning.

8. Easy-Clean Interior

The sides of the oven are coated, providing an easy-to-clean surface.

9. Broiling Rack

A broiling rack fits into the baking pan/drip pan to use when broiling.

10. Baking Pan/Drip Pan

A baking pan/drip pan is included for your convenience. Use with the broiling rack when broiling. Use alone when baking or roasting.

11. Cord Storage (not shown)

Takes up excess cord and keeps countertop neat.

12. BPA-Free (not shown)

All parts that come in contact with food are BPA-free.



BEFORE THE FIRST USE

Place your oven on a flat surface. Remove any packaging and promotional labels in or on the oven. Unwind the power cord. Check that the crumb tray is in place and that there is nothing inside or on top of the oven. Plug power cord into wall outlet.

Before first use, thoroughly wash the baking pan, broiling rack and oven rack with soap and water, and dry them thoroughly.

Before using your oven, make sure it is two to four inches away from the wall or from any objects on the countertop. Do not use on heat-sensitive surfaces. **DO NOT STORE OBJECTS ON THE TOP OF THE OVEN. IF YOU DO, REMOVE ALL OBJECTS BEFORE YOU TURN ON YOUR OVEN. THE EXTERIOR WALLS GET VERY HOT WHEN IN USE. KEEP OUT OF REACH OF CHILDREN.**

GENERAL GUIDELINES

Toast/Bagel: Always have the rack in rack position C, as indicated in the diagram on page 6, for even toasting. Always center your item/items in the middle of the rack.

Bake: Baking function can be used as you would normally use your large kitchen oven for roasting meats including chicken, or baking cakes, cookies and more.

Broil: Broiling function can be used for beef, chicken, pork, fish and more. It also can be used to top brown casseroles and gratins. **Caution:** Aluminum foil is not recommended for covering the drip pan. Foil is extremely dangerous when broiling fatty foods. Grease will accumulate and may catch fire. If foil is used to cover drip pan, be sure foil is tucked neatly around the pan and does not touch the walls or heating rods. **Never cover the crumb tray.**

Turning off the toaster oven broiler: Turn the function dial to OFF. The indicator light will turn off.

OPERATION

Toast:

To toast, make sure the oven rack is in rack position C, as indicated in the diagram on page 6. If toasting two items, center them in the middle of the rack. Four items should be evenly spaced – two in front, two in back. Six items should be evenly spaced – three in front, three in back. Close the glass door. Set function dial to TOAST.

Shade Selection:

Turn toast shade dial to desired browning setting. Press Start/Stop button to begin toasting.

Stop Toasting:

When the toasting cycle is finished, the oven will beep 5 times and turn off. If you wish to stop the toasting cycle before it is finished, simply press the Start/Stop button. The toaster oven broiler will cancel your toast cycle.

Bagel:

To toast a bagel, make sure the oven rack is in rack position C as indicated in the diagram on page 6. If toasting two items, center them in the middle of the rack. Four items should be evenly spaced – two in front, two in back. Six items should be evenly spaced – three in front, three in back. Close the glass door. Set function dial to BAGEL.

Shade Selection:

Turn toast shade dial to desired browning setting. Press Start/Stop button to begin toasting.

Stop Toasting:

When the toasting cycle is finished, the oven will beep 5 times and turn off. If you wish to stop the toasting cycle before it is finished, simply press the Start/Stop button. The toaster oven broiler will cancel your toast cycle.

Bake:

To bake, turn the temperature dial to the desired temperature and turn function dial to BAKE. The oven indicator light will turn on. Allow the oven to preheat for at least five minutes before putting food in the oven to bake.

Warm:

Turn the temperature dial to Warm and then turn the function dial to Warm. The oven indicator light will turn on.

Broil:

To broil, turn the temperature dial to BROIL and turn function dial to BROIL. The oven indicator light will turn on. Allow the oven to preheat for at least five minutes before putting food in the oven to broil.

Note: When broiling place the broiling rack in the drip pan. In most cases the oven rack should be in the higher position (position C, but for thicker items use position B; see diagram on this page).

Note: Never use glass oven dishes to broil. To stop broil operation, turn function dial to OFF position.

CLEANING AND MAINTENANCE

Always allow the oven to cool completely before cleaning.

1. Always unplug the oven from the electrical outlet.
2. Do not use abrasive cleansers, as they will damage the finish. Simply wipe the exterior with a clean damp cloth and dry thoroughly. Apply the cleansing agent to a cloth, not to the toaster oven, before cleaning.
3. To clean interior walls, use a damp cloth and a mild liquid soap solution or a spray solution on a sponge. Never use harsh abrasives or corrosive products. These could damage the oven surface. Never use Brillo pads, etc. on interior of oven.
4. To remove crumbs, slide out the crumb tray and discard crumbs. Wipe clean and replace. To remove baked-on grease, soak the tray in hot sudsy water or use nonabrasive cleaners. **Never operate the oven without the crumb tray in place.**
5. Wire rack, baking pan and crumb tray should be hand washed in hot sudsy water or use a nylon scouring pad or nylon brush.
6. Never wrap the cord around the outside of the oven. Use the cord storage cleats on the back of the oven.
7. Any other servicing should be performed by an authorized service representative.

IMPORTANT:

After cooking greasy foods and after your oven has cooled, always clean top interior of oven. If this is done on a regular basis, your oven will perform like

new. Removing the grease will help to keep toasting consistent, cycle after cycle.

All of our recipes have been tested in our kitchen and specially developed to work in the Cuisinart® Custom Classic™ Toaster Oven Broiler. These mouth-watering recipes are just a sampling of what the Cuisinart® Custom Classic™ Toaster Oven Broiler can do.

OVEN RACK POSITION DIAGRAMS

Each recipe gives you step-by-step directions and will even tell you where the oven rack should be positioned for best results. Please refer to the diagram below for oven rack positions. Each position is described with a letter that is referred to in the recipe.

RACK POSITION A



RACK POSITION B



RACK POSITION C



WARNING: Placing the rack in the bottom position or in the top position with the rack upwards while toasting may result in a fire. Refer to rack position diagram for proper use.

WARRANTY

Limited Two-Year Warranty

This warranty is available to consumers only. You are a consumer if you own a Cuisinart® Custom Classic™ Toaster Oven Broiler that was purchased at retail for personal, family or household use. Except as otherwise required under applicable law, this warranty is not available to retailers or other commercial purchasers or owners. We warrant that your Cuisinart® Custom Classic™ Toaster Oven Broiler will be free of defects in materials and workmanship under normal home use for 2 years from the date of original purchase.

We recommend that you visit our website, www.cuisinart.com for a fast, efficient way to complete your product registration. However, product registration does not eliminate the need for the consumer to maintain the original proof of purchase in order to obtain the warranty benefits. In the event that you do not have proof of purchase date, the purchase date for purposes of this warranty will be the date of manufacture.

CALIFORNIA RESIDENTS ONLY

California law provides that for In-Warranty Service, California residents have the option of returning a nonconforming product (A) to the store where it was purchased or (B) to another retail store that sells Cuisinart products of the same type. The retail store shall then, according to its preference, either repair the product, refer the consumer to an independent repair facility, replace the product, or refund the purchase price less the amount directly attributable to the consumer's prior usage of the product. If neither of the above two options results in the appropriate relief to the consumer, the consumer may then take the product to an independent repair facility, if service or repair can be economically accomplished. Cuisinart and not the consumer will be responsible for the reasonable cost of such service, repair, replacement, or refund of nonconforming products under warranty. California residents may also, according to their preference, return nonconforming products directly to Cuisinart for repair or, if necessary, replacement by calling our Consumer Service Center toll-free at 1-800-726-0190. Cuisinart will be responsible for the cost of the repair, replacement, and shipping and handling of such nonconforming products under warranty.

BEFORE RETURNING YOUR CUISINART PRODUCT

If your Cuisinart® Custom Classic™ Toaster Oven Broiler should prove to be defective within the warranty period, we will repair or, if we think necessary, replace it. To obtain warranty service, please call our Consumer Service Center toll-free at 1-800-726-0190 or write to: Cuisinart, 7475 North Glen Harbor Blvd, Glendale, AZ 85307. To facilitate the speed and accuracy of your return, enclose \$10.00 for shipping and handling. (California residents need only supply a proof of purchase and should call 1-800-726-0190 for shipping instructions.) Please be sure to include your return address, description of the product's defect, product serial number, and any other information pertinent to the return. Please pay by check or money order. **NOTE:** For added protection and secure handling of any Cuisinart product that is being returned, we recommend you use a traceable, insured delivery service. Cuisinart cannot be held responsible for in-transit damage or for packages that are not delivered to us. Lost and/or damaged products are not covered under warranty.

Your Cuisinart® Custom Classic™ Toaster Oven Broiler has been manufactured to the strictest specifications and has been designed for use only in 120 volt outlets and only with authorized accessories and replacement parts. This warranty expressly excludes any defects or damages caused by accessories, replacement parts or repair service other than those authorized by Cuisinart. This warranty does not cover any damage caused by accident, misuse, shipment or other than ordinary household use. This warranty excludes all incidental or consequential damages. Some states do not allow the exclusion or limitation of these damages, so these exclusions may not apply to you. You may also have other rights, which vary from state to state.

Important: If the nonconforming product is to be serviced by someone other than Cuisinart's Authorized Service Center, please remind the servicer to call our Consumer Service Center at 1-800-726-0190 to ensure that the problem is properly diagnosed, the product is serviced with the correct parts, and to ensure that the product is still under warranty.

Any other trademarks or service marks referred to herein are the trademarks or service marks of their respective owners.

©2013 Cuisinart
150 Milford Road
East Windsor, NJ 08520
Printed in China
13CE131667

L1 IB-10093C