GSG5 Parts List by Regular122


GSG5 Parts Groups



A = Receiver Group
B = Breech Body Group
C = Frame Body Group
D = Cocking Handle Set
E = Rear Sight

F = Stock
G = Barrel Extension Tube or Flashhider


H = Magazine I = Optional Sling Holder

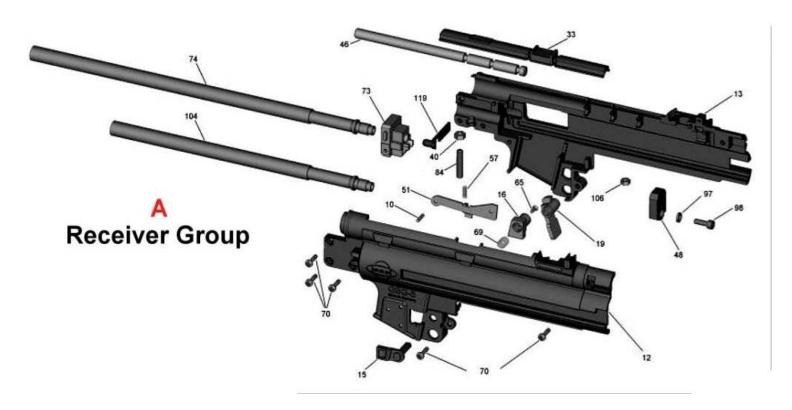

A = Receiver Group Parts List Diagram# - Description - [ATI Part #]

Diagram# - Description - [ATI Part #]

10 - Trigger Bar & Firing Pin Retainer Pin - [400.20.40.3]
12 - Receiver Side (Left) - [402.20.01.1]
13 - Receiver Side (Right) - [402.20.02.1]
15 - Magazine Catch - [402.20.04.1]
16 - Magazine Lever Cam - [402.20.05.1]
19 - Magazine Release Lever - [402.20.08.1]
33 - Receiver Cap - [402.20.25.1]
40 - Trigger Housing Nut - [402.20.03.1]
40 - Operating Rod Spring Guide - [402.20.39.1]
45 - Bolt Carrier Stop Block - [402.20.41.1]
51 - Bolt Stop - [402.20.45.1]
57 - Bolt Stop Spring - [402.20.52]
65 - Safety Spring Cap Screw - [402.20.69.3]
69 - Magazine Catch Spring - [402.20.65.1]
70 - Bolt Carrier Screw (Rear) - [402.20.68.3]
73 - Breech Block - [402.30.01.1]
74 - Barrel 16" - [402.30.02.1]
84 - Barrel Lock Stud [402.30.16.3]
97 - Lock Washer - [402.40.21.3]
98 - Bolt Carrier Stop Block Screw - [402.40.22.3]
104 - Barrel Short - [402.30.15.1]
106 - Bolt Carrier Stop Block Nut - [402.50.04.3]
119 - Level Indicator (Dry Fire Cap) - [402.90.01.1]

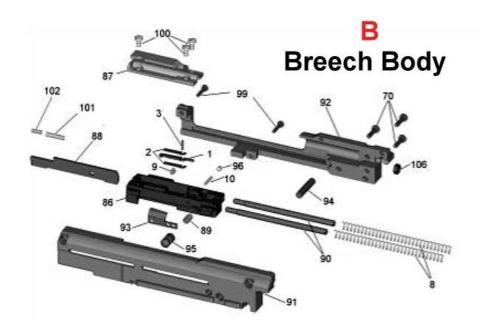

B = Breech Body Group Parts List Diagram# - Description - [ATI Part #]

- Diagram# Description [ATI Part #]

 1 Extractor [400.40.06.1]

 2 Extractor Spacer (2-Req) [400.40.23.1]

 3 Extractor Pin [400.40.19.3]

 8 Bolt Return Springs [400.40.10.1]

 9 Extractor Spring [400.40.21.1]

 10 Trigger Bar & Firing Pin Retainer Pin [400.20.40.3]

 70 Bolt Carrier Screw (Rear) [402.20.68.3]

 86 Breech Bolt [402.40.01.1]

 87 Breech Bolt Cover [402.40.02.1]

 88 Firing Pin [402.40.03.1]

 89 Firing Pin Stop Spring [402.40.04.1]

 90 Bolt Return Spring Guide (2-Req) [402.40.05.1]

 91 Breech Bolt Carrier (Left) [402.40.07.1]

 92 Breech Bolt Carrier (Left) [402.40.08.1]

 93 Ejector [402.40.09.1]

 94 Breech Bolt Carrier Locator Pin [402.40.20.3]

 95 Firing Pin Safety [402.40.11.1]

 96 Firing Pin Safety [402.40.11.3]


 97 Bolt Carrier Screw (Front) [402.40.23.3]

 100 Bolt Cover Screw [402.40.24.3]

 101 Firing Pin Spring [402.40.25.1]

 102 Firing Pin Plunger [402.40.26.1]

 106 Bolt Carrier Stop Block Nut [402.50.04.3]

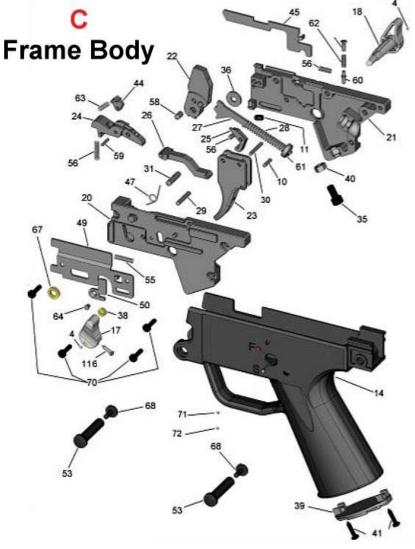


C = Frame Body Parts List Diagram# - Description - [ATI Part #]

```
C = Frame Body Parts List


Diagram# - Description - [ATI Part #]

4 - Safety Marker Button (yellow) - [400.50.08.3]
10 - Trigger Bar & Firing Pin Retainer Pin - [400.20.40.3]
11 - Hammer Strut Washer (Small) - [400.20.52.1]
14 - Trigger Housing - [402.20.03.1]
17 - Safety Lever (Left) - [402.20.07.1]
18 - Safety Lever (Right) - [402.20.07.1]
20 - Trigger Plate (Left) - [402.20.07.1]
21 - Trigger Plate (Right) - [402.20.09.1]
21 - Trigger Plate (Right) - [402.20.10.1]
22 - Hammer - [402.20.11.1]
23 - Trigger - [402.20.12.1]
24 - Sear Housing - [402.20.13.1]
25 - Disconector - [402.20.14.1]
26 - Trigger Bar [402.20.15.1]
27 - Hammer Strut - [402.20.15.1]
28 - Hammer Spring - [402.20.16.1]
29 - Trigger Pin - [402.20.19.3.01]
30 - Disconector Pin - [402.20.66.3]
31 - Hammer Pivot Pin - [402.20.21.3.01]
35 - Trigger Housing Bolt - [402.20.27.3]
36 - Hammer Pivot Washer - [402.20.28.3]
38 - Trigger Housing Spacer Washer (Small) - [402.20.30.1]
40 - Trigger Housing Nut - [402.20.33.1]
41 - Pistol Grip Cap Screws ( 2-Req ) - [402.20.33.3-01]
42 - Sear - [402.20.37.1]
43 - Sear - [402.20.37.1]
44 - Sear - [402.20.38.1]
55 - Trigger Return Spring - [402.20.40.1]
47 - Hammer Return Spring - [402.20.40.1]
49 - Firing Pin Safety Lever - [402.20.43.1]
50 - Trigger Return Lever - [402.20.55.1]
51 - Trigger Return Spring - [402.20.55.1]
52 - Sear Housing Pin - [402.20.55.3]
53 - Sear Pin - [402.20.55.3]
64 - Safety Spring Plunger - [402.20.56.1]
65 - Sear Spring - [402.20.58.1]
66 - Safety Spring - [402.20.58.3]
67 - Trigger Return Lever Number (Large) - [402.20.63.1]
68 - Stock Bolt - [402.20.55.3]
69 - Safety Spring - [402.20.58.3]
70 - Bolt Carrier Screw (Rear) - [402.20.68.3]
71 - Safety Off Marker Button (Red) - [402.20.70.1]
72 - Safety Off Marker Button (Red) - [402.20.70.1]
73 - Safety Screw - [402.20.67.3]
```

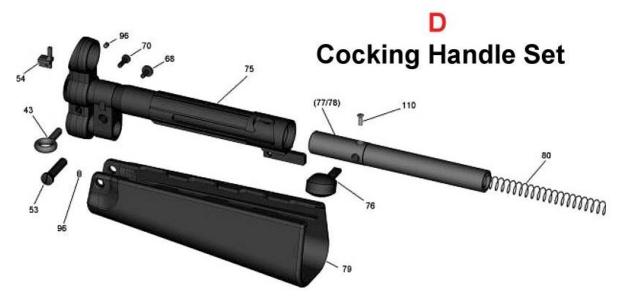

D = Cocking Handle Set Parts List Diagram# - Description - [ATI Part #]

- 43 Sling Loop [402.30.25.1]
 53 Stock Bolt [402.20.48.1]
 54 Front Sight Blade [402.50.08.1]
 68 Stock Bolt Screw [402.20.67.3]
 70 Bolt Carrier Screw (Rear) [402.20.68.3]
 75 Cocking Tube Housing [402.30.23.1]
 76 Cocking Tube Handle [402.30.24.1]
 77 Cocking Tube (Front) [402.30.21.1]
 78 Cocking Tube (Rear) [402.30.21.1]
 79 Handguard [402.30.6.1]
 80 Cocking Tube Spring [402.30.07.1]
 96 Firing Pin Retainer Set Screw [402.40.15.3]
 110 Cocking Handle Screw [402.30.22.3]

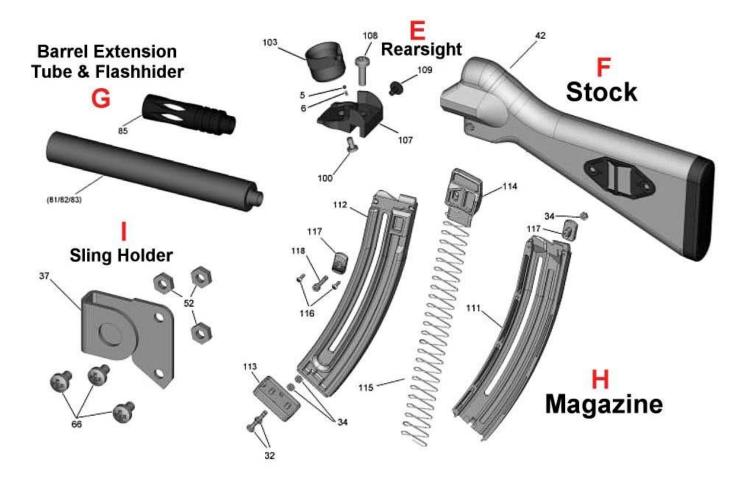

E = Rear Sight Assembly- [402.50.0050]

Diagram# - Description - [ATI Part #]

5 - Rear Sight Spring Plunger - [400.40.15.3] 6 - Rear Sight Spring - [400.40.14.1] 100 - Bolt Cover Screw - [402.40.24.3] 103 - Rear Sight Tower - [402.50.0101] 107 - Rear Sight Body - [402.50.05.1] 108 - Rear Sight Install Screw - [402.50.06.3] 109 - Rear Sight Windage Screw - [402.50.07.1]

F = Stock

42 - Butt Stock Complete - [402.20.34.1]

G = Barrel Extensions & Flash Hider Parts List

Barrel Extension Tube [402.30.01]

81 – Barrel Cover Tube (Faux Suppressor) – [402.30.10.1] 82 – Barrel Cover Tube Muzzle Cap – [402.30.11.1] 83 – Barrel Cover Tube Threaded Cap – [402.30.12.1]

Flash Hider

85 - Flash Hider - [402.30.17.1]

H = Magazine Parts List

32 - Magazine Bottom Screws - [402.20.24.3]
34 - Magazine Follower Nut - [402.20.26.3]
111 - Magazine (Right Side) - [402.60.01.1]
112 - Magazine (Left Side) - [402.60.02.1]
113 - Magazine Bottom - [402.60.04.1]
114 - Magazine Follower - [402.60.05.1]
115 - Magazine Spring - [402.60.06.1]
117 - Magazine Follower Thumb Piece - [402.60.09.1]
118 - Magazine Thumb Piece Screw - [402.60.10.3-01]

I = Optional Sling Holder - [Accessory GER202545]

37 - Sling Bracket - [402.20.29.1] 52 - Sling Bracket Nut - [402.20.46.3-01] 66 - Sling Bracket Screw (3-Req) - [402.20.62.3]