



Luna™ Voyager

User's Guide





Congratulations on your purchase!

Thank you for purchasing Luna Voyager compact alarm clock and personal audio system. The following pages explain the features and operation of Luna Voyager, so please take a few moments to read through this manual.

PACKAGE CONTENTS:

- Luna Voyager
- Dock adapters*
- AC power adapter
- 4 global wall adapters**

* ADAPTERS FOR IPHONE 3GS/3G, IPOD TOUCH 2G AND IPOD NANO 5G INCLUDES

** WALL ADAPTERS ARE INCLUDED IN THE INTERNATIONAL VERSION ONLY

IMPORTANT

Please read all safety instructions before proceeding.

The answers to most set up and performance questions can be found in this manual or in the Trouble Shooting Tips. If you have any further questions about the operation or use of this product please contact our consumer care team for assistance before returning it to the place of purchase.

CUSTOMER SERVICE

Email: support@xtrememac.com

Telephone: 1-866-392-9800 (Toll free within the United States)

Hours of operation: Monday through Friday, 9am–6pm EST

PRODUCT SAFETY

When used in the directed manner, this unit has been designed and manufactured to ensure your personal safety. However, improper use can result in potential electrical shock or fire hazards. Please read all

safety and operating instructions carefully before installation and use, and keep these instructions handy for future reference.



The lightning flash with arrowhead, within an equilateral triangle, is intended to alert the user to the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



Caution: To prevent the risk of electric shock, do not remove cover (or back). No user-serviceable parts inside. Refer servicing to qualified service personnel.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

CAUTION: To prevent electric shock do not use this (polarized) plug with an extension cord, receptacle or other outlet unless the blades can be fully inserted to prevent blade exposure.

WARNING: To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.

IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water -- This apparatus shall not be exposed to dripping or splashing, and no objects filled with liquids, such as vases, shall be placed on the apparatus.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer’s instructions. The apparatus should not be situated on a bed, sofa, rug or similar surface that may block the ventilation openings.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.


9. No naked flame sources, such as lighted candles, should be placed on the apparatus.
10. Protect the power cord from being walked on or pinched—particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Do not install in an area which impedes the access to the power plug. Disconnecting the power plug is the only way to completely remove power to the product and must be readily accessible at all times.
12. Power source—Use only the power supply that is included with this unit. Do not substitute with any other power supply.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped. For service, refer to qualified service personnel, return to the dealer, or call the XtremeMac service line for assistance.




This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.


This class B digital apparatus complies with Canadian ICES-003.

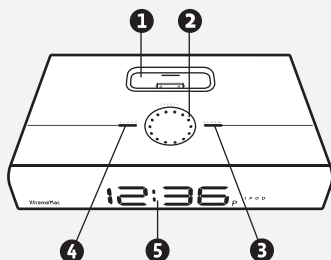

1. Universal dock well
2. Control wheel
Settings/Volume/Snooze
3. Alarm button
4. Clock
Play/Pause Button
5. LED display

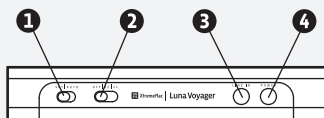

1. Auto time set switch
2. OFF|12|24 hour switch
3. Line-in
4. Power jack

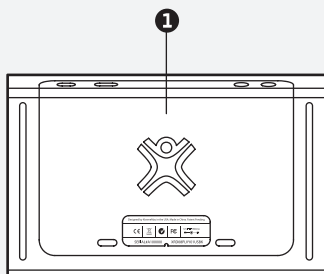

1. Battery Compartment

UNPACKING AND INITIAL SETUP

1. Remove Luna Voyager from the box and remove all foam and protective plastic. Properly dispose of all material.
2. Place Luna Voyager on a level surface following the precautions listed in the safety warnings.
3. Remove AC adapter from the packaging.
4. Read and review manual and safety warnings.
5. Open battery compartment cover on the bottom of the unit and insert two “AAA” batteries for alarm and time backup and close cover.
6. Connect the AC adapter into the jack on the back of the unit labeled power and connect the other end of the adapter into a power outlet.
7. Select the appropriate dock adapter for your device and carefully insert into the dock well. Each dock adapter is labeled with compatible device on the bottom left corner of each adapter. Please see the section “Inserting and removing the dock adapters” later in the manual for more details.

SETTING THE TIME WITH THE DEVICE

Set the time switch on the back of the unit to AUTO and then dock your iPhone or iPod. The unit will automatically set the time from your device. Make sure to set the clock mode switch on the back of the unit to 12 or 24 hour depending on your preference.

Note: If you are experiencing difficulties getting the unit to set the time from your device remove the device, set the switch to AUTO and then dock your device into the unit again. If you are still experiencing difficulties, restart your iPhone or iPod and repeat the process.

SETTING THE TIME MANUALLY

1. Set the clock mode switch on the back of the unit to 12 or 24 to set the clock into 12 hour or 24 hour mode depending on your preference.
2. Press and hold the clock button on the top of the unit until the time on the display begins to blink.
3. Use the control wheel on the top of the unit to adjust the hour, AM or PM (indicated by an “A” or “P” next to the time for 12 hour mode) and then press the clock button to advance to the minutes.

4. Use the control wheel to set the minutes and press the clock button to accept and save your changes.

Note: Make sure the time switch on the back of the unit is set to SET to save your changes. Otherwise once you dock your device the unit will automatically set the time from the device.

SETTING THE ALARM

1. Press and hold the alarm button on the top of the unit until the time on the display begins to blink.
2. Use the control wheel on the top of the unit to adjust the hour, AM or PM (indicated by an “A” or “P” next to the time for 12 hour mode) and press the alarm button to advance to the minutes.
3. Use the control wheel to set the minutes and press the alarm button to accept and save your changes. The display will then show the volume level (L 5-20).
4. Use the control wheel to set the volume to the desired wake level and press the alarm button to accept and save your changes. The display will then show the time.
5. Press the alarm button to activate the alarm and select the alarm source – the display will show the alarm time. Press the alarm button while in this mode to switch between iPod, buzzer and off. The selected source will remain on the display to indicate the alarm is set.

Note: If iPod is selected as the source and there is no iPod present, the alarm will automatically default to buzzer.

Snoozing the alarm

While the alarm is sounding, slightly rotate the control wheel to snooze the alarm. The snooze is automatically set for 10 minutes.

Turning off the alarm

While the alarm is sounding, press the alarm button once to turn the alarm off and reset for the following day.

When the alarm is not sounding, press the alarm button until you do not see a source on the display. This means the alarm is off and will not sound the following day.

To control display brightness

Press and hold the clock button and rotate the control wheel to control the display brightness – rotating the control wheel counter clockwise will dim the display and rotating the control wheel clockwise will brighten the display.

Note: The display will turn all the way off – to turn back on, press and hold the clock button while rotating the control wheel clockwise.

Inserting and removing dock adapters

1. Select the appropriate dock adapter for your device by turning over the adapter and looking at the bottom left corner for the name of the device for compatibility.
2. Gently press the adapter into place until you hear a click, which indicates it has been locked into place.
3. To remove the dock adapter, use a flat item like a letter opener or a flat head screwdriver and insert it into the slot behind the dock connector and gently pull upward.

Listening to your iPod/iPhone

1. Use the insert designed for your iPhone or iPod and gently press it into the universal dock well.
2. Carefully place your device into the dock well.
3. Press the play/pause button on the top of the unit (this is also the clock button) or press play on the device and use the control wheel to adjust the volume.

QUICK GUIDE FOR USING THE CONTROLS

ALARM BUTTON

When alarm is not sounding

Press once to get into alarm activation mode. Once in this mode, the display will show the alarm time. Pressing the alarm button in this mode will toggle between selecting the source – iPod or buzzer and turning the alarm off.

When alarm is sounding

Press once to turn the alarm off and reset for the following day.

CONTROL WHEEL

When alarm is sounding

Rotate the wheel when alarm is sounding to snooze the alarm. The snooze is set for 10 minutes.

When iPod is playing

Use the control wheel to adjust the volume.

To set the time

Press and hold the clock button and use the control wheel to adjust the time.

To control display brightness

Press and hold the clock button and rotate the control wheel to control the display brightness - rotating the control wheel counter clockwise will dim the display and rotating the control wheel clockwise will brighten the display.

Note: The display will turn all the way off - to turn back on, press and hold the clock button while rotating the control wheel clockwise.

TIME AND HOUR MODE SWITCHES

Auto Time Set Switch

This switch is located on the back of the unit and marked as SET|AUTO. If you set it to AUTO and then dock your iPhone or iPod, the unit will automatically set the time from the device.

12/24 Hour Mode Switch

This switch is located on the back of the unit and marked OFF | 12| 24. Set the switch to 12 for 12 hour clock mode or 24 for 24 hour clock mode depending on your preference. If this switch is set to OFF, the unit will be turned off for travel mode. It will hold time and alarm settings if there are 2 “AAA” batteries in the unit.

Note: You will need to select 12 or 14 hour mode to turn on the device.

TROUBLE SHOOTING

NO POWER

Check AC adapter connection

Connect the AC adapter into the jack in the back of Luna labeled “Power” and then plug the AC adapter into the wall outlet.

Check wall outlet function

Plug another device into the same outlet to confirm the outlet is working.

Check 12/24 hour Switch

Make sure the switch on the back of the unit is set to 12 or 24 hour to power the device. If the switch is set to off, the unit is turned off for travel mode.

Check display dimmer

If the unit is plugged in and you know you are getting power, press and hold the clock button and rotate the control wheel clockwise to brighten the display.

NO SOUND FROM SPEAKERS

Check volume level

Turn the control knob or use the remote to adjust the volume.

Check iPod connection

Remove your iPod from the dock well and re-dock to make sure it is properly connected. Make sure you are using the proper dock adapter for your device.

Check the iPod/iPhone

Try restarting your device and then re-docking to ensure a proper connection.



XtremeMac.com

Imation Europe B.V., Siriusdreef 46-52, 2132 WT Hoofddorp, The Netherlands



Made in China | Fabriqué en Chine. Designed in the USA. © Imation Corp. XtremeMac, Luna and the “X” logo are trademarks of Imation Corp. “Made for iPod” and “Made for iPhone” mean that an electronic accessory has been designed to connect specifically to iPod or iPhone, respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. iPhone, iPod, iPod classic, iPod nano and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries. Distributed by Imation Enterprises Corp., Oakdale, MN, USA. Imation shall not be liable for any lost data or incidental or consequential damages related to this product.