

Steripen® CLASSIC 3


Quick Start Guide




1

Install 4 AA batteries with polarities as shown in battery compartment.


1

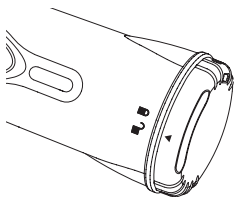


2

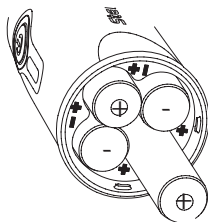

3

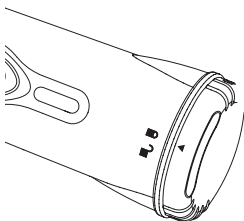


2. _____

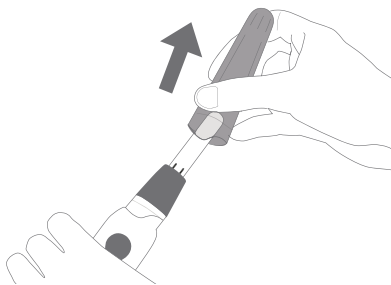

3.

Click the activation button. 1x for 0.5 liter, and 2 x for 1 liter of water.

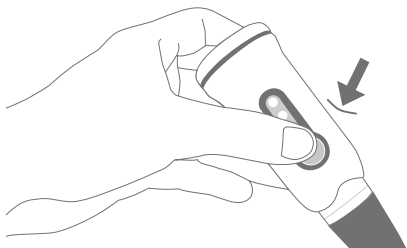


0.5 L = 1 click

1 L = 2 clicks

4.


While green LED(s) flash(es), submerge in clear water and stir.

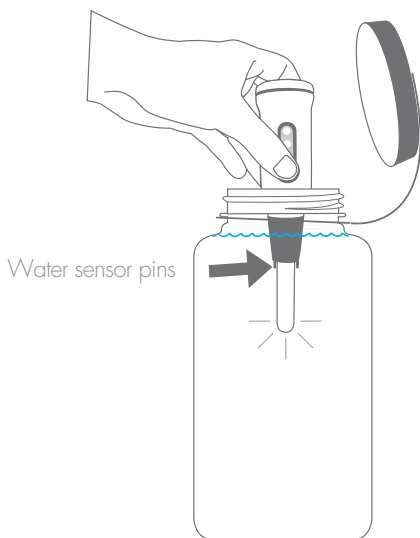

LED Indicators


SUCCESSFUL

(One liter = two green LEDs, half liter = one green LED.)

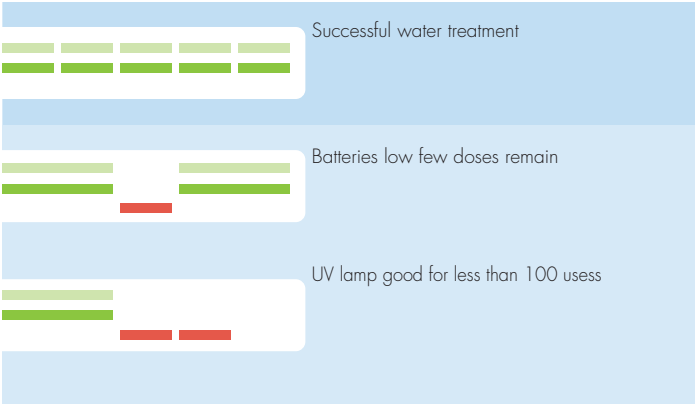

LED Indicators

UNSUCCESSFUL

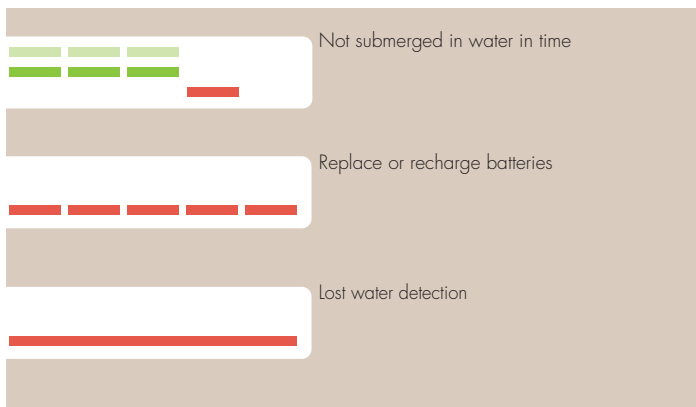

If LED indicators show normal signals, but the lamp does not fully illuminate, do not consume.

Anatomy Composition Aufba Anatomia

1 Battery cap

2 Indicator LEDs

3 Activation button

4 Water sensor pins

5 UV lamp

6 Lamp cover

Treatment size: ½ or 1 liter

Treatment time: 48 or 90 seconds

Lamp life: 8,000 activations

Number of liter treatments per set of batteries: (numbers are approximate) lithium – 150 rechargeable – 100

3 year limited warranty



Directions for Use 40 C.F.R. §156.10(i)(2)(II).
It is a violation of Federal law to use this product in a manner inconsistent with its labeling.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: 1. This device may not cause harmful interference, and 2. This device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: 1. Reorient or relocate the receiving antenna. 2. Increase the separation between the equipment and receiver. 3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. 4. Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user authority to operate the equipment under FCC rules.

- Do not mix old and new batteries;
- Do not mix alkaline (standard), carbon-zinc, lithium or rechargeable (Ni-Cd, Ni-MH, etc) batteries.
- Do not dispose of batteries in fire.
- Batteries should be recycled or disposed of as per state and local guidelines.

Caution: If the equipment is used in a manner not specified by the manufacturer, the protection provided by the equipment may be impaired.

Do not attempt to bypass water sensor; it is an important safety feature.

Do not handle Steripen with wet hands; do not touch water sensor pins with wet fingers.

⚠ This device emits UV light, direct exposure may be harmful.

⚠ Do not use UV lamp as a light source.

⚠ Do not use near skin, eyes, or insert into bodily orifices.

User guide:

katadyn.com/help/steripen

Product support:

help@katadyn.com

Frequently asked questions:

katadyn.com/help/steripen

Warranty information:

katadyn.com/help/steripen

Product registration (Required for warranty):

katadyn.com/help/register

Produced for:

Katadyn North America, Inc.
2495 Xenium Lane N,
Plymouth, MN 55441
USA

www.katadyn.com

help@katadyn.com

SPPF-QS-EFGS.2001

©2020

Katadyn North America, Inc.